

# T700 - Process volume capacity 700 L per cycle.



Our patented process is designed to **shred and sterilize** infectious waste by saturated steam. Shredding and sterilization are achieved in one fully **enclosed and automated**, stainless steel, system with **no intermediate waste handling**.

The contaminated waste is loaded into the upper chamber where a heavy-duty shredder reduces the waste into small pieces. Using gravity, the processed material drops into the lower treatment chamber.



After shredding, waste and all the inner parts of the machine are steam heated to 138°C (280 F) and pressurized to 3,5 bar (51 psi).



Sterilization is achieved by maintaining a temperature of 138°C (280 F) at the core of the waste for 10 minutes.



After the cooling process, the final product is safe to recycle or to dispose as ordinary waste. Waste are both sterilized (Microbial inactivation = 10<sup>6</sup>) and volume-reduced by up to 80 %.



The 30 minutes duration of an average cycle process is fully automated and totally monitored. A computerized control system scans the process and automatically prints and records on a memory card a batch report at the end of each cycle with the essential sterilizing parameters for accurate record keeping.



Approved by the Higher Council of Public Health of France under the direction of the Ministry of Health and the Ministry of the Environment.

ASME



# T700

 - Process volume capacity 700 L per cycle.


## Technical specifications

### General Characteristics






Dimensions (L x W x H)	460 x 430 x 520 cm 15,1 x 14,1 x 17,1 ft
Shipping Weight	2500 kg
Max weight when filled with water For a special hydraulic test	4700 kg
Stress	2,0 kg/cm <sup>2</sup>
Steam Pressure	8 bar
Max Steam Flow	230 kg/h
Compressed Air	6 bar
Electricity 380 V / 3-Phase	20 kW

### Operating Characteristics

Average Cycle Time	30 minutes
Process Volume Capacity	700 liters
Average Waste Density	100 - 150 kg/m <sup>3</sup>
Average Process Weight Capacity	70 - 105 kg/cycle 155 - 231 lb/cycle
Microbial Inactivation	10 <sup>8</sup>
Waste Volume Reduction	80%

### Consumption / cycle

Steam	18 kg
Electricity	3,5 kWh
Water	30 liters

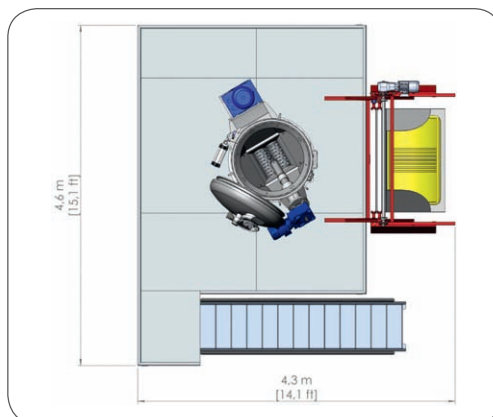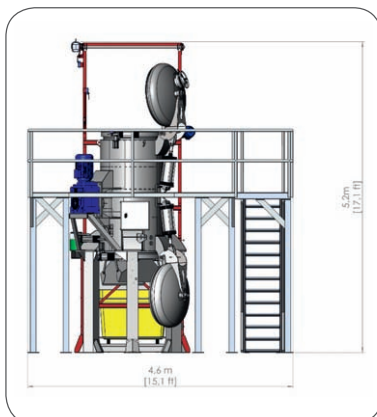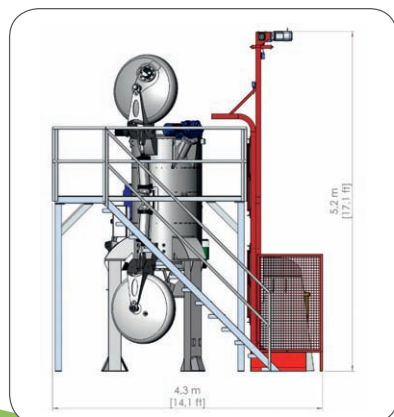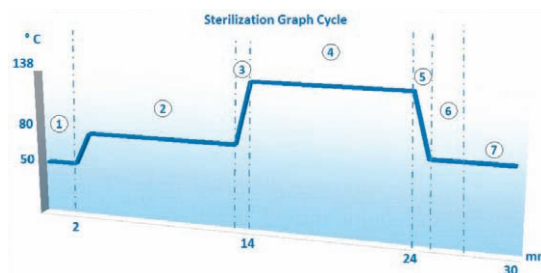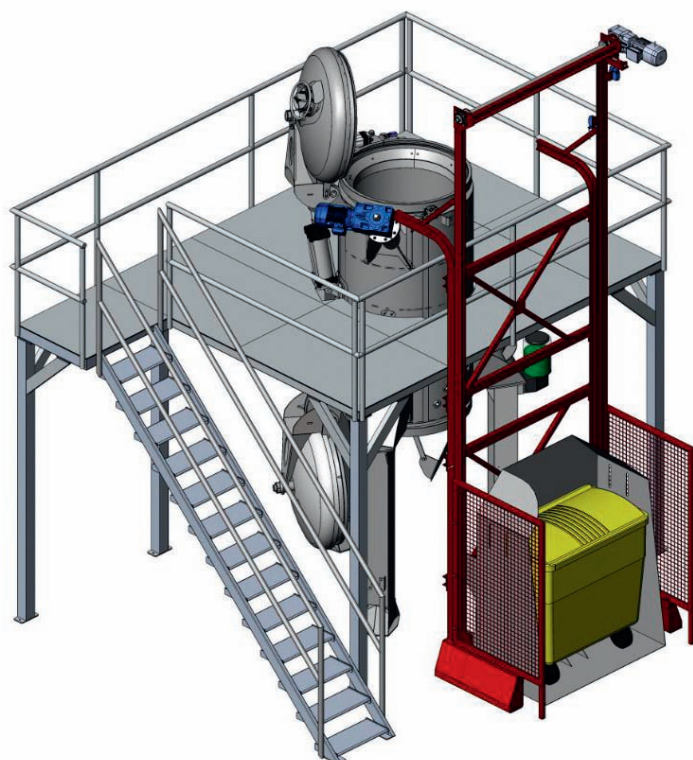

28 rue Sébastopol  
59100 ROUBAIX - FRANCE

Tél. +333 20 70 98 65  
Fax +333 20 36 28 05

contact@ecodas.com  
www.ecodas.com



ENGINEERED SOLUTIONS FOR HEALTHCARE & THE ENVIRONMENT